

HL-002 ASSEMBLY INSTRUCTIONS

PART LIST

- 1-TOP PIPE
- 4-SPRING WASHER
- 4-HEXAGON BOLT
- 2-MAST
- 1-BOTTOM PIPE
- 4-CAP-TYPE NUT
- 4-SPRING WASHER
- 2-BASE
- 4-SPRING WASHER
- 4-HEXAGON BOLT
- 4-HEXAGON BOLT
- 2-LOCK CASTER
- 2-NOT LOCK CASTER

BOLTS ARE SCREWED
IN PLACE

