

# HL-003 ASSEMBLY INSTRUCTIONS

## PART LIST

- 1-TOP PIPE
- 8-SPRING WASHER
- 8-HEXAGON BOLT
- 2-SIDE MAST
- 1-MIDDLE MAST
- 2-BOTTOM PIPE
- 6-CAP-TYPE NUT
- 6-SPRING WASHER
- 3-BASE
- 8-SPRING WASHER
- 8-HEXAGON BOLT
- 6-HEXAGON BOLT
- 3-LOCK CASTER
- 3-NOT LOCK CASTER
- BOLTS ARE SCREWED IN PLACE

